



*Protect what
matters most.*



www.PipeBurstPro.com

FloMeter Installation Instructions

Preparation:

1. Flush the service line upstream of the FloMeter to remove dirt and debris.
2. A ball valve should be installed for easy FloMeter change out.
3. Confirm water flow direction with arrow on the FloMeter body.
4. Close the water supply valve.

***NOTE: HORIZONTAL FLOMETER BODY WITH REGISTER VERTICALLY ORIENTED
DIRECTLY ABOVE THE FLOMETER BODY INSTALLATION ONLY***

Installation:

1. Place the FloMeter in the line. Arrows indicate direction of flow.
2. Tighten only as required to seal. Do not over tighten.
3. Open the upstream valve slowly allowing air to escape slowly. Open a faucet or valve downstream to allow air to escape slowly. **Note:** *Opening the valve too quickly can damage the FloMeter.* Close the faucet or valve.
4. Test for leaks.
5. Open a faucet to determine the FloMeter is functioning.
6. Connecting the pulse output wire into the VIP Sr.
 - a. **Note:** *The instructions listed here supersede the instructions in the VIP Sr. User Manual.*
 - b. Connect BLACK wire from FloMeter 1 to FM1, if using one FloMeter.
 - c. Connect BLACK wire from FloMeter 2 to FM2, if using two FloMeters.
 - d. Connect RED wire to COM.
 - i. If you have two FloMeters on one VIP Sr. BOTH RED wires will connect to COM.
7. The remaining steps of the setup process for the FloMeter are done through ionleaks.com.
 - a. **Note:** *You must have your VIP Sr. connected to the internet and ionleaks.com to use the FloMeter and if it is not, the FloMeter will NOT trigger the TickerValve.*

PipeBurst Pro Contact Information:

800-246-LEAK (5325)
info@greenfielddirect.com

GreenField Direct, LLC
14015 238th St.
Greenwood, NE 68366